

KOPPAR OCH FAT



Cup and saucer

BOLA
0,28 l / Ø 165 mm
(nr 1007, 1013)
0,20 l / Ø 145 mm
(nr 1006, 1015)
0,15 l / Ø 145 mm
(nr 1004, 1015)



Cup and saucer

BOLA
0,08 l / Ø 125 mm
(nr 1090, 1091)



Cup and saucer

BOLA
0,06 l / Ø 110 mm
(nr 1080, 1081)



Cup and saucer

BOLA
0,20 l / Ø 145 mm
(nr 1050, 1015)



Cup and saucer

BOLA
0,09 l / Ø 125 mm
(nr 1040, 1091)



Cup and saucer

DEGUSTA
BOLA
0,06 l / Ø 125 mm
(nr 1039, 1091)
0,06 l / Ø 110 mm
(nr 1039, 1081)



Cup and saucer

EWA
0,25 l / Ø 160 mm
(nr 1059, 1062)
0,20 l / Ø 160 mm
(nr 1058, 1062)



Cup and saucer

EWA
0,15 l / Ø 140 mm
(nr 1057, 1011)



Cup and saucer

EWA
0,07 l / Ø 120 mm
(nr 1060, 1061)



Cup and saucer

BISTRO
NANA
0,20 l / Ø 145 mm
(nr 1106, 1744)
0,10 l / Ø 120 mm
(nr 1170, 1741)



Cup and saucer

BISTRO
NANA
0,40 l / Ø 170 mm
(nr 1109, 1746)



Cup and saucer

MORNING
NANA
0,10 l / Ø 120 mm
(nr 1180, 1741)



Cup and saucer

MORNING
NANA
0,20 l / Ø 145 mm
(nr 1101, 1744)



Cup and saucer

MORNING
NANA
0,40 l / Ø 170 mm
(nr 1107, 1746)



Cup and saucer

NADINA
NADIA
0,20 l / Ø 155 mm
(nr 1803, 315)



Cup and saucer

NANA
0,08 l / Ø 120 mm
(nr 1740, 1741)



Cup and saucer

NANA
0,15 l / Ø 145 mm
(nr 1743, 1744)



Cup and saucer

NANA
0,25 l / Ø 170 mm
(nr 1745, 1746)



Cup and saucer

CRISTA
BOLA
0,06 l / Ø 110 mm
(nr 1000, 1081)



Cup and saucer

CRISTA
TV GEX
0,06 l / 20x13 mm
(nr 1000, 1017)



Cup and saucer

DEGUSTA
TV GEX
0,09 l / 20x13 mm
(nr 1040, 1017)



Cup and saucer

BOLA
TV GEX
0,08 l / 20x13 mm
(nr 1090, 1017)



Cup and saucer

BOLA
TV GEX
0,06 l / 20x13 mm
(nr 1080, 1017)



Cup and saucer

DEGUSTA
TV GEX
0,06 l / 20x13 mm
(nr 1039, 1017)



Cup and saucer

BOLA
GEX
0,08 l / Ø 135 mm
(nr 1090, 1016)



Cup and saucer

BOLA
GEX
0,06 l / Ø 135 mm
(nr 1080, 1016)



Cup and saucer

DEGUSTA
GEX
0,09 l / Ø 135 mm
(nr 1040, 1016)
0,06 l / Ø 135 mm
(nr 1390, 1016)